


STEAM ROOM PLAN


Note: Generator dimensions shall be vary as per models

Installation Note:

- 1) Steam Generator is not suitable for installation in a damp or wet area.
- 2) screw the generator to the wall, through screw holes drawing.
- 3) Once the generator is fixed, the anchor screw must be fitted to prevent the generator from being accidentally moved.
- 4) Should the generator be boxed in, an access door or panel must be fitted to allow for easy access and maintenance of the generator unit without damaging the decoration, you should also make allowance for ventilation minimum 100mm x100mm.
- 5) Sauna is not suitable for installation in a wet area / Floor

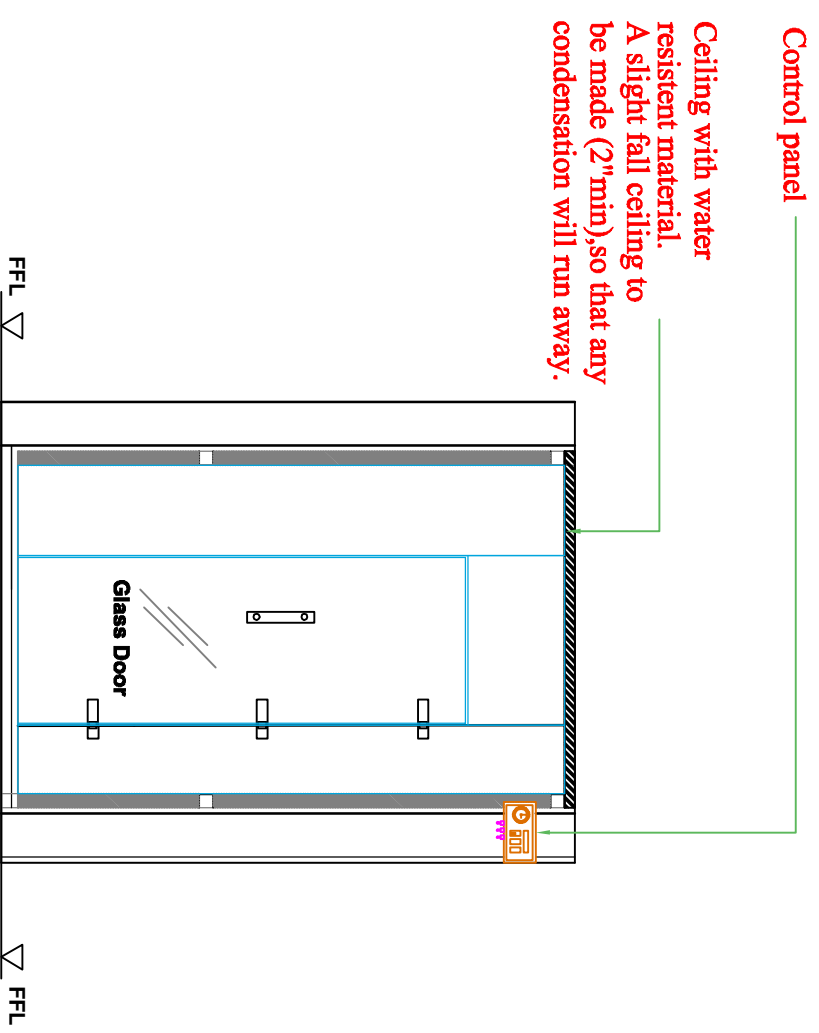

STEAM ROOM

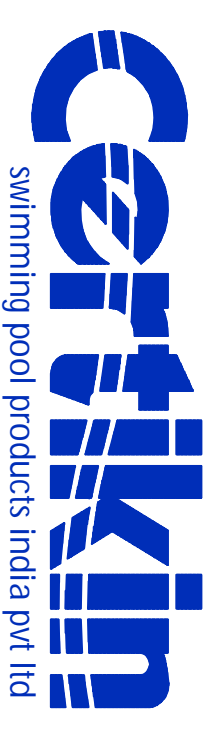

STEAM ROOM

Drawn: Arunprasad

Scale: NTS

Date: 31/03/11

Checked: